

Art-Lift

The electric tail lift



Operation and user manual

Read this operation and user manual accurate,
before you use the tail lift.

Please read this manual carefully and make sure that the information is always on hand

The tail lift "Art-Lift" is a new development product.
This operation and user manual is a preliminary issue; subsequent changes or supplements can't be ruled out.



Congratulations

We are glad to see that you have reinforced with the new development tail lift "Art-Lift". You will find all the important information in this manual, so you and your employees can work well with the Art-Lift.

You also find important safety information to work with the Art-Lift secure. Read the manual carefully and make sure that your employees who work with the Art-Lift read the manual too. Optimum safety can only be guaranteed when you and your employees are wholly on the evidence.

1. Contents	3
2. Safety	4
2.1 Safety conditions	4
2.2 Safety symbols	4
2.3 Safety feigned	5
3. User manual	6
3.1 Expand the Art-Lift	6
3.2 Fold the Art-Lift	7
4. Options	8
4.1 Different options	8
5. Maintenance / testing	8
5.1 Components	8
5.2 Electrical connections	9
5.3 Failure	9
6. Guarantee conditions	10
6.1 Warranty	10
6.2 Warranty period	11
7. Confirmation for the dealer	11

2. Safety

2.1 Safety conditions

In this chapter can you find how you must use the Art-Lift safely. Read this section carefully, before you use the Art-Lift or performing maintenance.

Actuall Netherlands Innomotive International Company is not responsible for materiel - or bodily injury which is not called in the operation and user manual.

2.2 Safety symbols

This manual contains the next safety symbols



Extra vigilance



May cause problems



This can cause damage to the Art-Lift, if you fail to comply with the instructions in the manual.



Risk of (severe) injury if you fail to comply with the instructions in the manual.

2.3 Safety feigned

Maximum safety can only be guaranteed, if you read the operating instructions very carefully, before you use the Art-Lift.



The maximum capacity of the Art-Lift tail lift contains maximum 200kg.

This is indicated by weight should not be exceeded.



**No persons would be transported on the loading platform!
Art-Lift is not a passenger elevator!**



The loading platform must always be in the locked position. NEVER drive with a wholly or partially unfolded and / or lowered tailgate. Only drive with a closed side door / back door (where fitted).




The montage of the tail lift must only be done by a trained employee.

3. User manual

3.1 Expand the Art-Lift

- Connect the main power switch, so the lift has power.
- Push on the lever and pull, tilt the lift till its completely out of the vehicle.
- Tilt the platform carefully till the 90° .
- Pull to unlock the lever (1) and tilt the platform 90° (2)

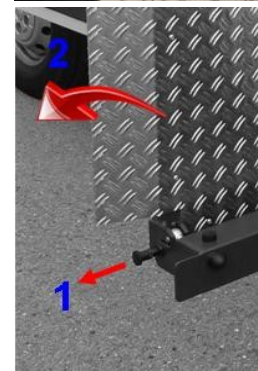

Operation and user manual

- Tilt the bridge plate from the vehicle to the lift or from the platform in the car. (This depends on how the bridge is mounted)



- The lift is now ready to use. You can move the lift up and down with the button or with a remote controller.



3.2 Fold the Art-Lift

If you are done with loading can you fold the lift in the inverted sequence way. Move the lift open to the top and tilt the platform back in the car. Now you place the platform at the left side and tilt it 90° to the right, till the detent pin snaps. Now grab the platform and tilt it into the vehicle. Cause of the detent pin can you place the lift easy into the vehicle.

4. Options

The tail lift "Art-Lift" has different options to be removed. Spare parts can separated be ordered at your dealer from Actual Netherlands Inomotive International Company

4.1 Different options

Main battery switch
Other adapter for montage to the vehicle
Afrol security
Bridge plate (in the vehicle / platform)
modification platform
Adjust lift size to the vehicle

5. *Maintenance / testing*

Basically is the Art-Lift maintenance free. It is recommended to always check it after 12 months, and remote / replace the errors. The research after 12 month has to be done by an expert.

5.1 Components

All the components of the Art-Lift are different available; this parts can be ordered and delivered by the dealer or by Actual Netherlands Inomotive International Company.

5.2 Electrical connections

The electrical connections must only be done from a workplace, or else will the guarantee or invalidate the warranty.

5.3 Failure

Failure	Mogelijke oorzaak	Oplossing
Lift doesn't lift and sinks any more	No connection to the vehicle power supply converter	Check the voltage, check the cable connections and test the converter
Lift raises very slow	Battery too weak, converter defect	Replace the battery charger, install stronger alternator for battery
Lift doesn't have a function	Fuse broken	Replace fuses, board in lift 20A fuse battery 40A

6. Guarantee conditions



The guarantee conditions of the Art-Lift tail lift get described in this chapter. Read this section carefully before you use the Art-Lift or before maintenance work.

6.1 Guarantee

The guarantee covers nothing of this points:

Regular maintenance and repair.

Damage by:

Infinity use

Normal wear and tear

Influences by weather and / or cooling lubricants

Failure by non-compliance of the installation and operating instructions.

Repairs performed by the customer himself or by an external company and not by Actuall Netherlands Innomotive International Company or an authorized Actuall Netherlands Innomotive International Company.

The use of the product longer than served


Failures on the machine when our product is used or build-in.

The guarantee covers nothing, if the failures caused after the delivery from the customer, from the retail or from third party. Especially by: not professional installation but by company setting, faulty or negligent treatment or storage, not suitable components or not suitable operation or use.

The obligations of the manufacturer are limited to presentations at work and/or material replacements of defective components. The costs, outbound transit and work are not included. The Actuall Netherlands Innomotive International Company shall not replace components, which have been lost or damaged by normal use or abuse. Replaced components are property of Actuall Netherlands Innomotive International Company and are ordered by Actuall Netherlands Innomotive International Company, free return.

6.2 Duration of warranty – kinds of warranty – influences on your warranty

You are entitled to 12 months of warranty of the product after install. The warranty is only for structural defects.

 **Warning:** Parts of the lire / hoist frame have got a special protective layer. This layer must not be in touch with aggressive substances brine etc. The layer can get a black discoloration. A warranty from external influences is not allowed!

7. Confirmation by the dealer

Here declare the following that the montage of the Art-Lift by the installations instructions of Actual Netherlands Innomotive International Company has been done. The dealer has an entry in the use of the Art-Lift effect.

Installations performed:

Residence: Date:

Mechanic: Caption:

Mark dealer



Actual Netherlands Innomotive
International Company – 3821AP
Amersfoort/
Printerweg 51 / Tel: 033 707 4889
www.actuall.eu / info@actuall.nl